

HOW TO USE THE **NU-WAL**® SYSTEM:



1. Cut fiberglass mat 2" longer than height.



2. Apply saturant to area to be covered.




3. Apply fiberglass mat to wet surface.




4. Trim excess mat where wall meets ceiling.




5. Trim mat at baseboard and window.

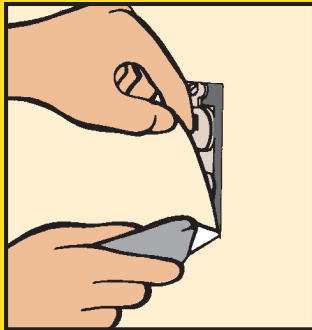

6. Trim mat at outlets, switches, etc.

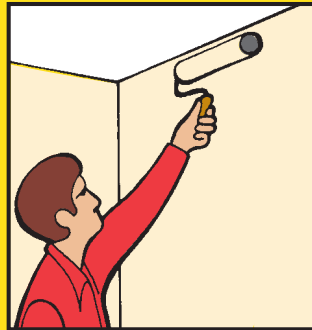


7. Apply second coat of saturant to wet mat.

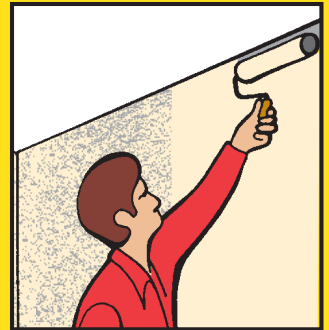


8. Apply 1st coat of saturant to adjacent area.



9. Apply mat to 2nd area, overlapping by 1".

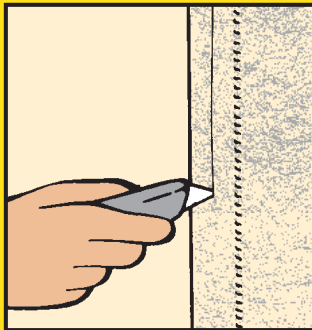

10. Cut down center of overlap (both layers).

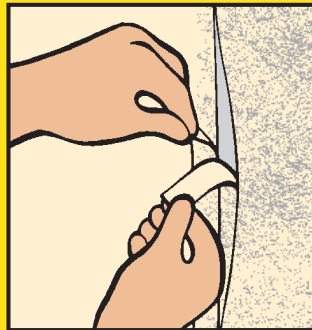

11. Remove mat strips on both sides of cut.



12. Apply 2nd coat of saturant (include seam)

Allow the #2500 Nu-Wal 24-48 hours of cure time before applying #3600 Top Coat, your own finish coat or wallpaper.